



Model No:ATLAS

Pivot Door

INSTALLATION INSTRUCTIONS

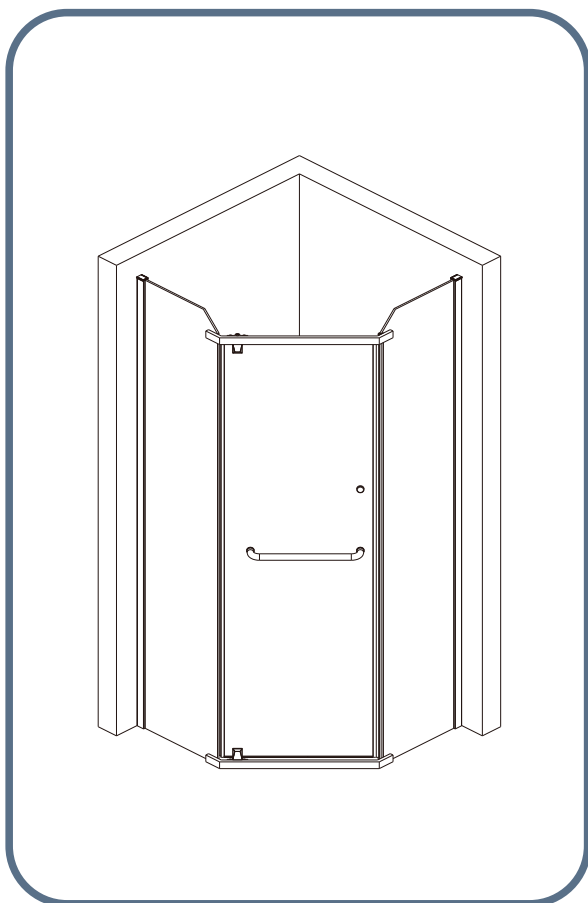

Tools Required

**Drill****6mm Masonry Drill
3.2mm HSS Drill****Spirit level****Sealant Gun****Tape Measure****Pencil****PH2 TYPE
Screwdriver**

Please not hand tools NOT supplied.


IMPORTANT

These instructions assume that installation is done against solid/tiled walls.

The wall plugs supplied with the installation kit are for use on solid walls. Hollow or stud-partition walls will require alternative fixings. Please consult with a reputable trades person or hardware supplier for the correct type of fixing.

It may also be necessary to consult your tiling supplier about the correct method drilling your tiles.






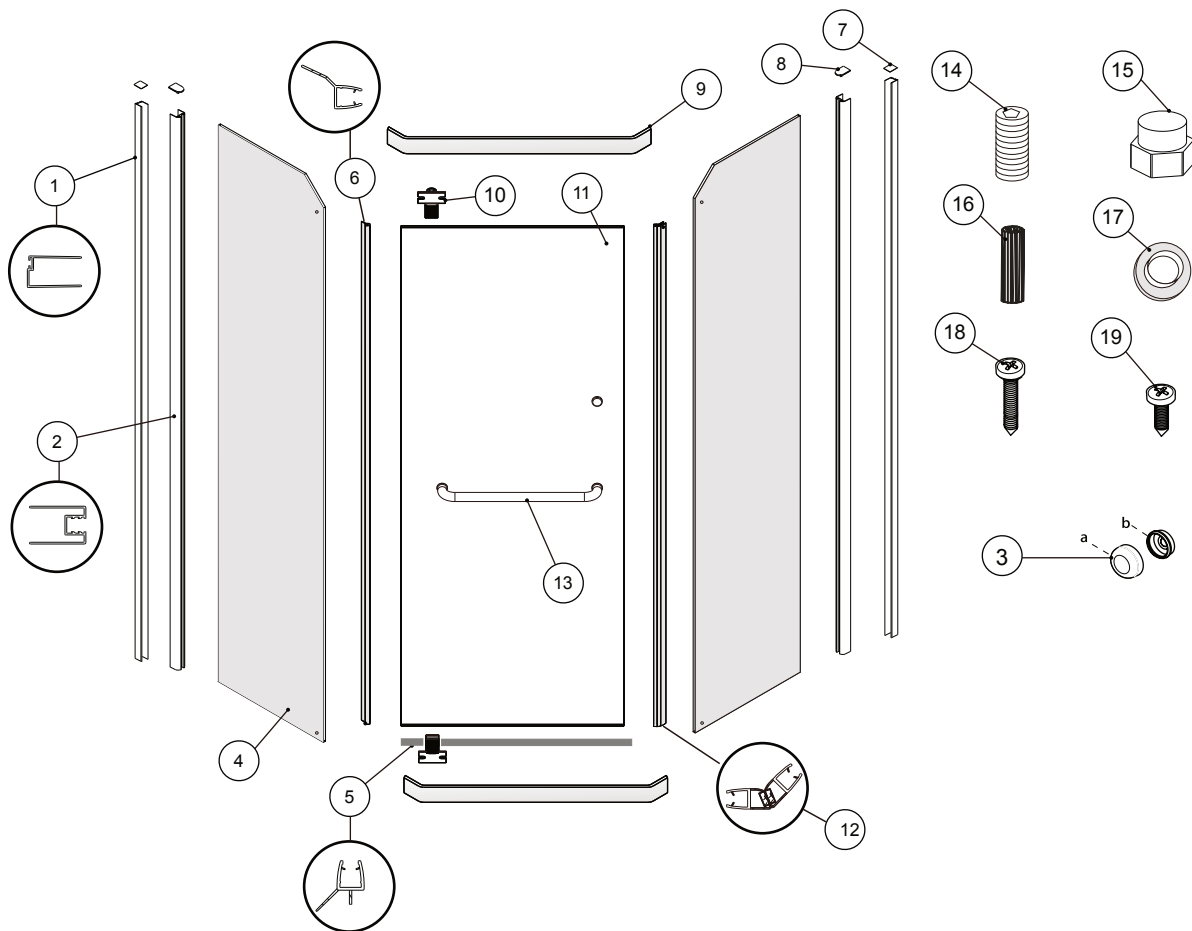


NO.	Description	Qty	NO.	Description	Qty
1	Wall profile	2	11	Glass panel	1
2	vertical profile	2	12	Magnetic strip	2
3	Turnbuckle cover A + B	8	13	Handle	1
4	fixed glass panel	2	14	M8 screw	8
5	bottom waterproof strip	2	15	Brass nut	8
6	side waterproof strip	1	16	Wall plug	8
7	wall profile cover cap	2	17	Rubber gasket	8
8	vertical profile cover cap	2	18	Screws M4x30	8
9	stainless steel rail	2	19	Screws M4x10	8
10	Spindle	2			






Installation Steps

Step 1

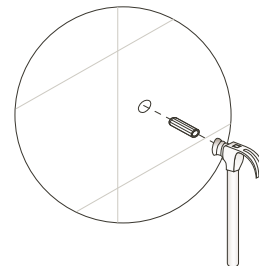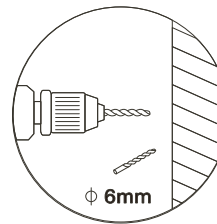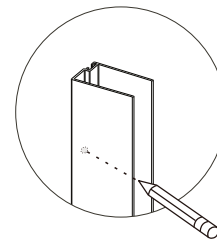
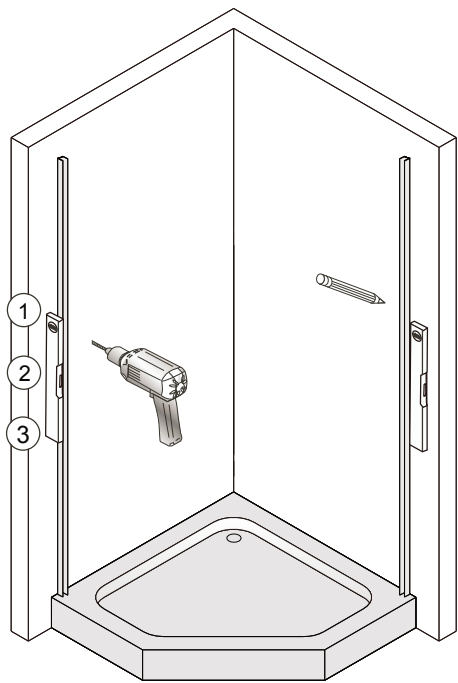


Step 2



Before installation, the glass must be sealed with glass glue and wait for 24 hours for it to dry thoroughly.

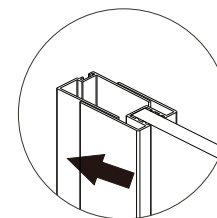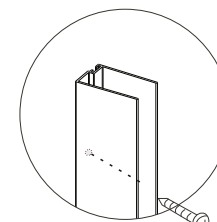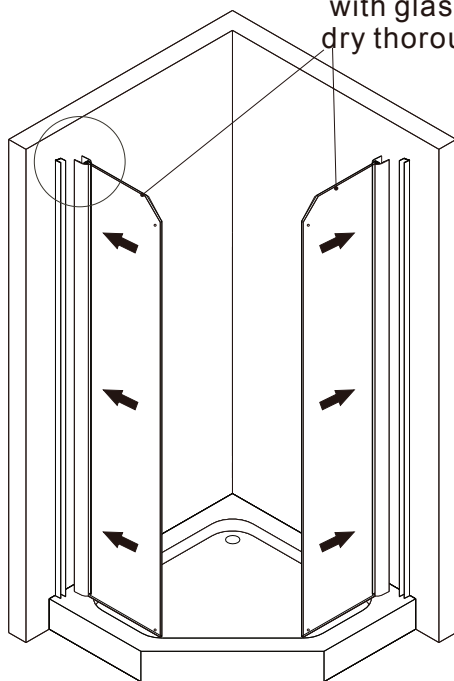



Step 3

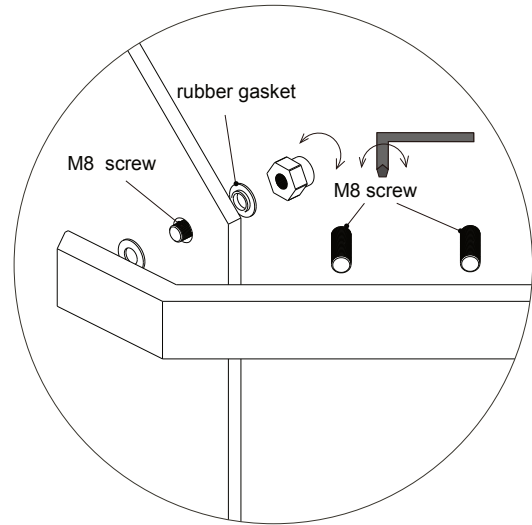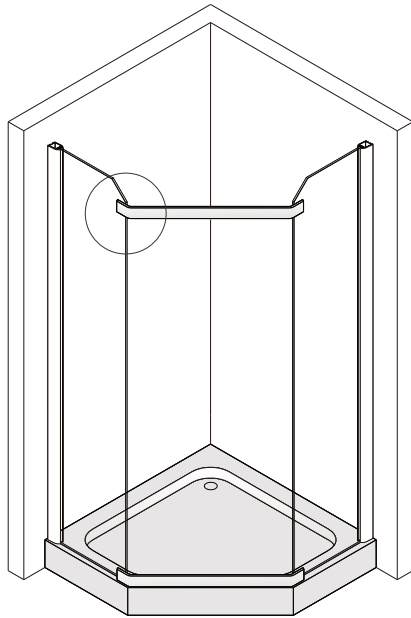


Step 4

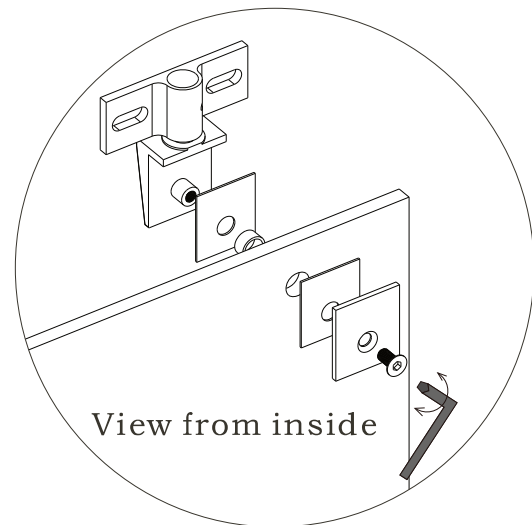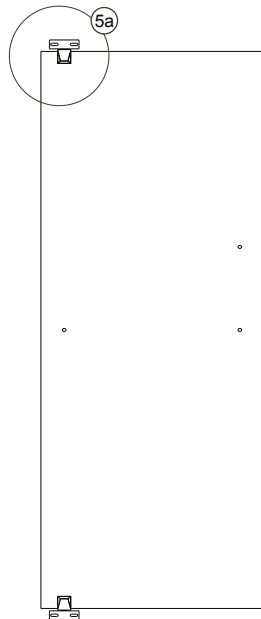








Step 5

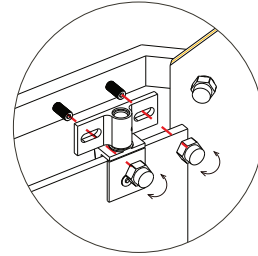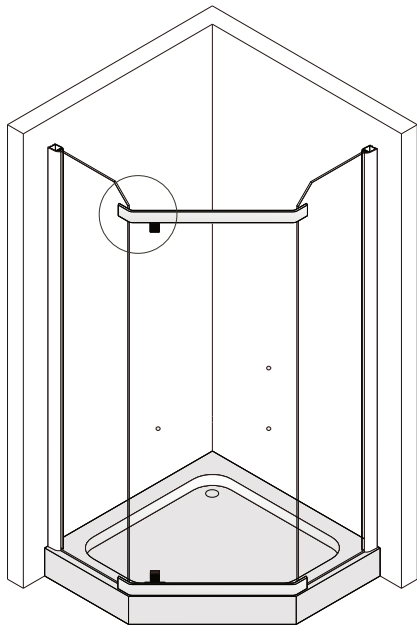



View from inside

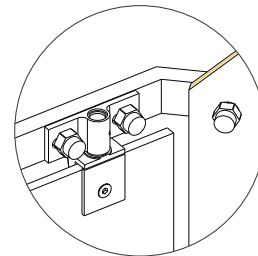





Step 6

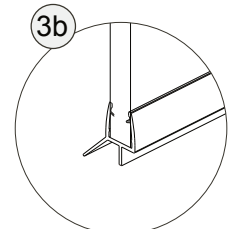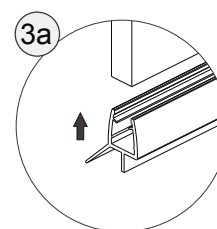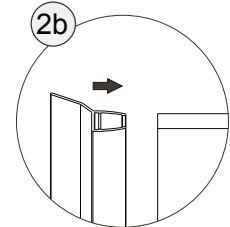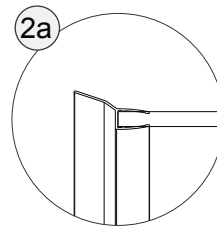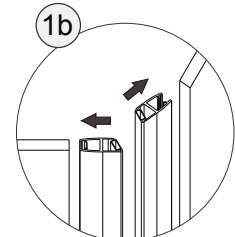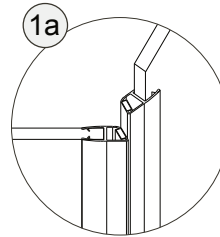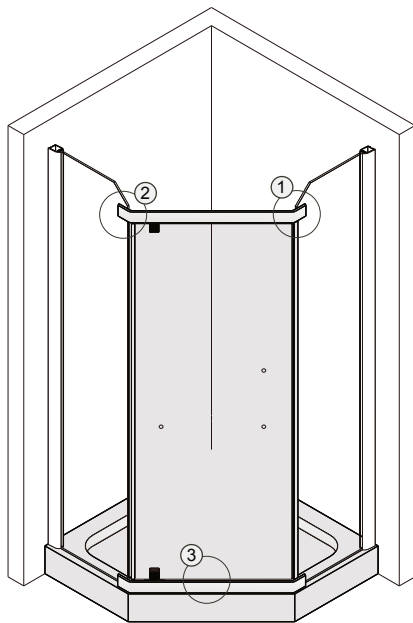

Step 7

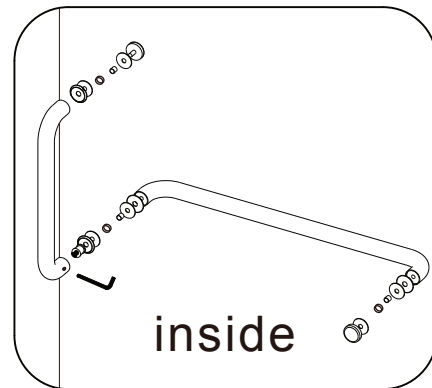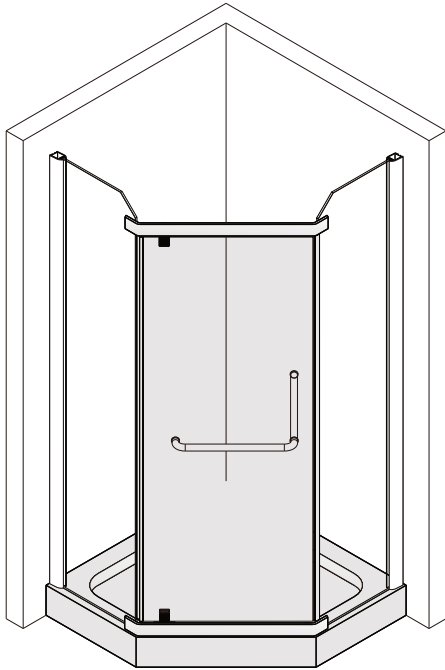



Step 8

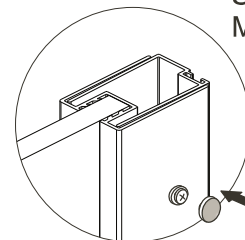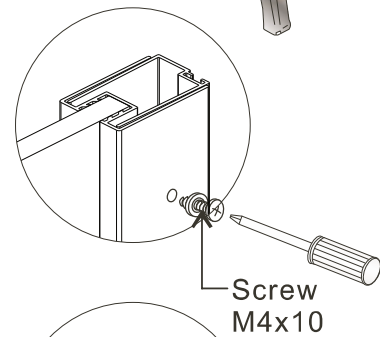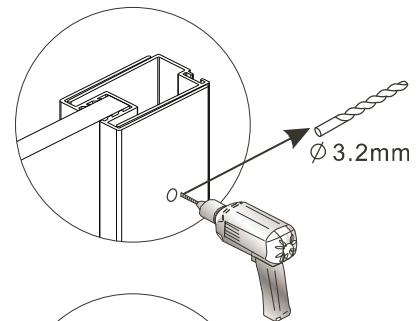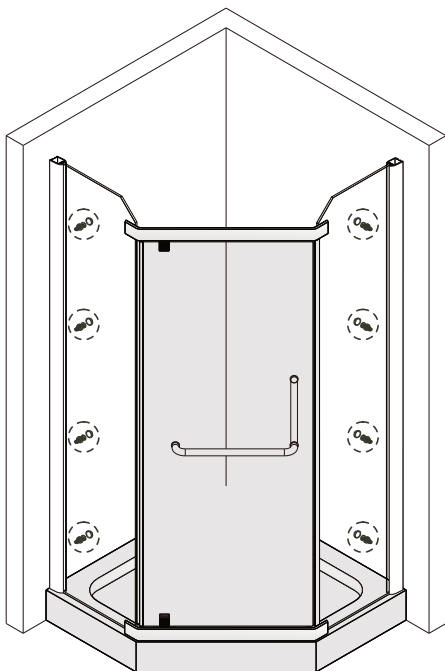

View from inside



Step 9

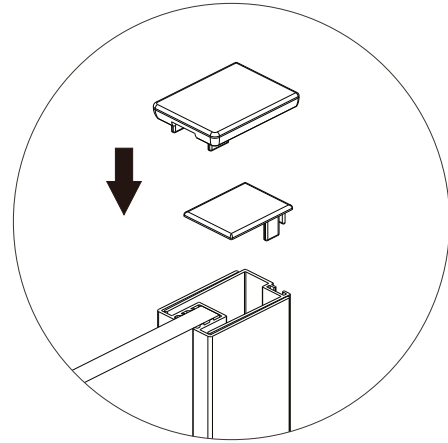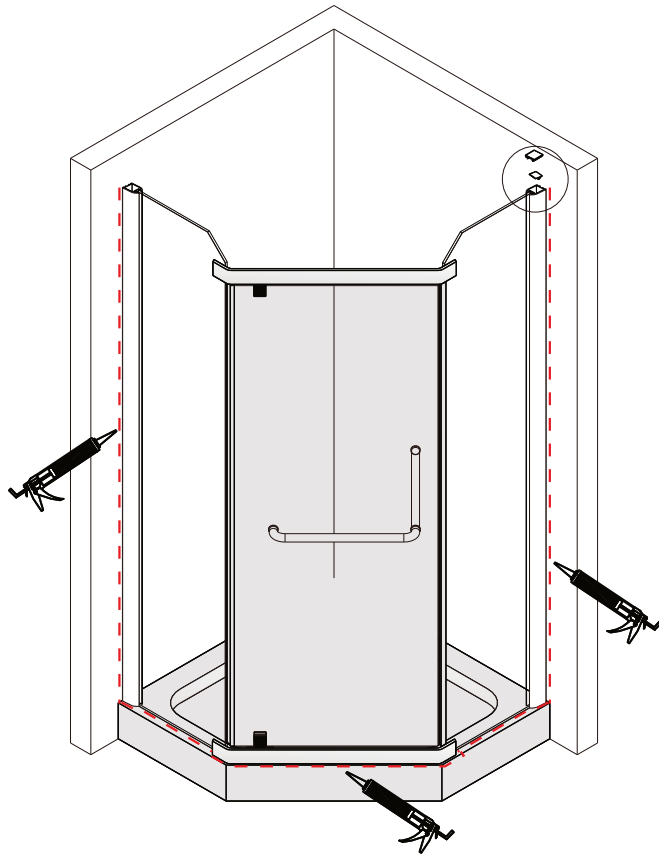

Allow 24 hours for silicone to dry before use.

Silicone on the outside edge only

