



INSTALLATION GUIDE FOR VANITY



Technical Drawing

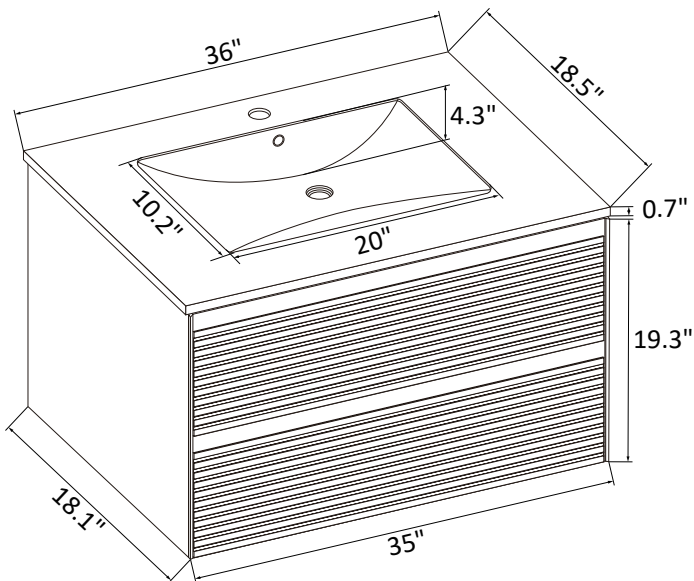

45 Mins

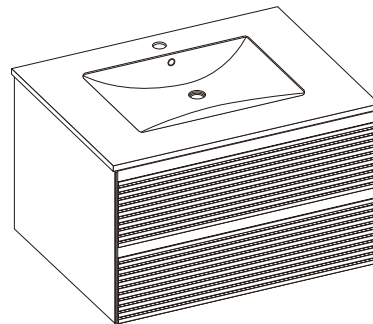

	2
	2

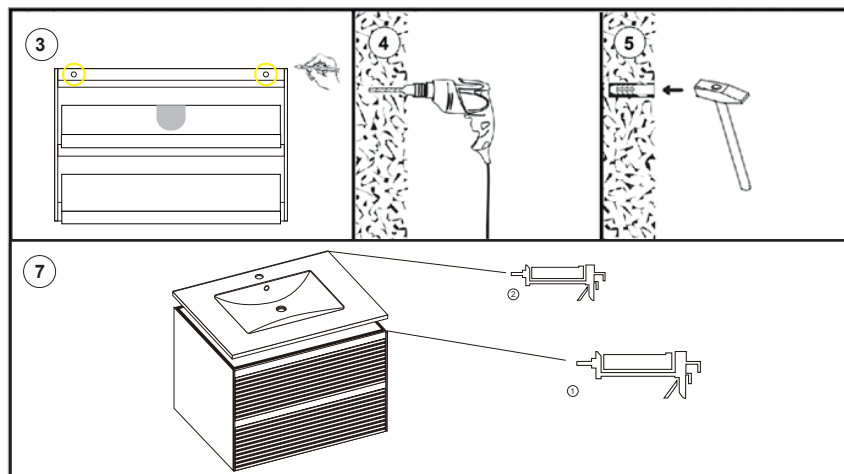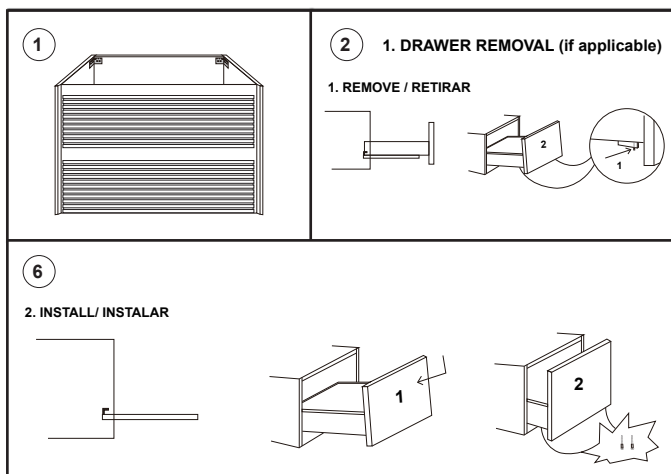

- 1. Position & level:** With help, place the vanity against the wall carefully and mark the hole location with a pencil. Use a level to ensure it is perfectly horizontal. (standard height for reference: 85cm, from basin top to the ground)
- 2. Remove the first drawer:** Remove the screws under the first drawer slide, then pull the drawer upwards.
- 3. Secure to wall:** Drill the holes with a percussion drill. Ensure the hole positions are horizontal. Use a hammer to nail the expansion bolt plugs into the two holes and keep them level with the wall.
Note: The expansion bolt plugs supplied are only suitable for solid stone/brick walls.
- 4. Place the vanity on the wall.** Use a screwdriver to tighten the screws into the expansion bolts at two holes. Ensure the vanity is securely mounted.
- 5. Install faucet/drain (not including with vanity)** – Follow your faucet kit instructions. Check for leaks after connecting water supply.
- 6. Reinstall the first drawer:** Extend the cabinet slides, align with drawer slides, fix the screws under each drawer slide, then test opening/closing.
- 7. Install countertop:** Apply silicone caulk along the cabinet top edge, place the countertop, press down, and wipe excess. Let cure 24 hours.

