

Shower enclosure
Installation Instruction

GREAT SOUTHERN GREAT SOUTHERN

Contents

Welcome to use our Shower enclosure. Before you install your shower enclosure, please read these instructions carefully to familliarize yourself with the required tools, materials, and installation sequences. Follow the sections that pertain to your particular installation. In addition to proper installation, read all operating and safety instructions.

In stall at ion	Drawing		 	 	1
Installation	Sequence	s	 	 	2-4

Maintenance


- A:Pls keep the shower base clean and avoid to block up the drainer by hair or others. Using wet and soft cloth with toothpaste to clean the water scale on the shower base.
- B: Do not use any detergent of high concentration of acid or alkalic or organic solvent to clean the bathtub surface, including surface, plastic fitting, aluminum bottom frame, other fittings etc). Advice to clean with cleanser essence
- C: Use drop cloth to clean chromed parts
- D: Do not recommend the use of abrasive cleaners on any of its products. Harsh cleaners will damage the metal of glass finish on your shower enclosure
- E:Maintenance of aluminum frame
- 1.For painted surface of aluminum frame: Firstly prenvent from direct sunshine, or the surface painting color will be light; Second, do not use any caustic cleaners; Third, do not use any crude material to clean the surface. Forth, do not use knife to touch it.
- 2.For Bright silver surface of aluminum frame:it is better comparing with painted surface, but the hardness is not so good, so do not use any crude material to clean it, also no knife etc.

GREAT SOUTHERN GREAT SOUTHERN


Installation Drawing


Parts Identification



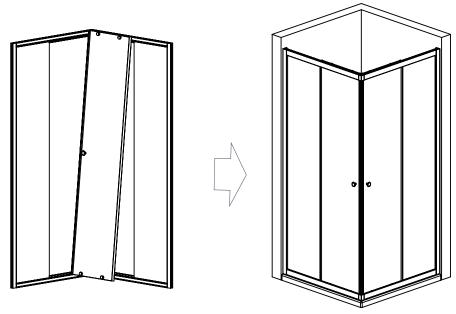



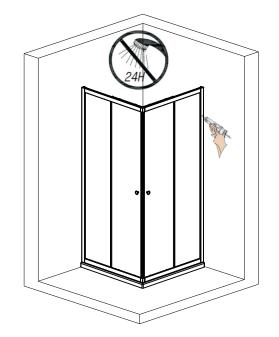

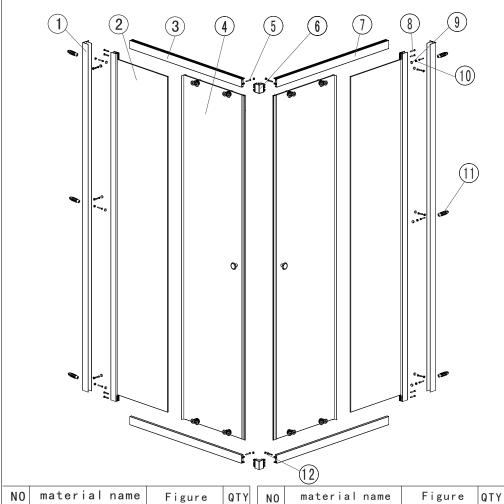

NO	material name	Figure	QTY	
1	pivot assembly	M	2	
2	glass door		2	(
3	alnminium alloy channelA		2	(
4	stationary glass	·	2	
(5)	screw st3.9*13	6	10	(
6	corner/angle connector		2	
(7)	alnminium allov channelB		2	

				l .
(8	screw st3.9*35	- The state of the	14
-	9	screw decoration cap	0	12
-	10	Screw cap	0	12
	11)	wall anchors		6
	12	Screw cap	0	4
\Box				

GREAT SOUTHERN GREAT SOUTHERN


Tools list/Installation Sequences

Tools list

Electrical Drill	Drill Bit (Φ6,Φ3.2)	Pencil	
Phillips Screwdriver	Measuring Tape	Level	
← (0			
Hammer	Caulk		
R			

Installation Sequences

Step 1

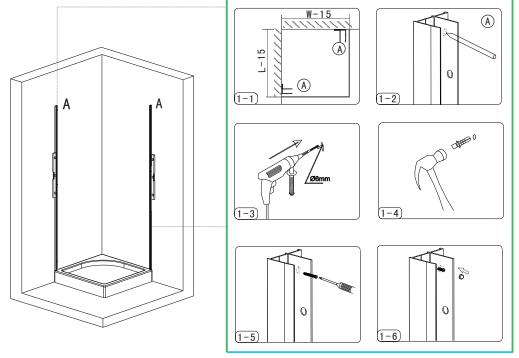

Installation Drawing

