




Tools Required

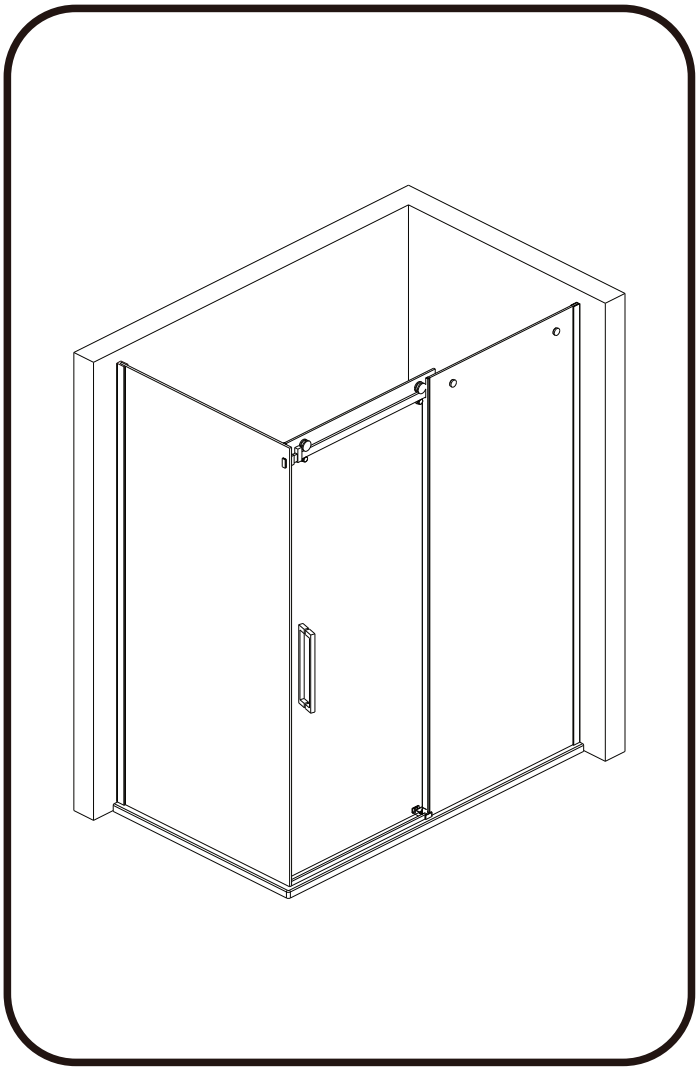

Drill




6mm Masonry Drill
3.2mm HSS Drill



Spirit level



Sealant Gun



Tape Measure



Pencil



PH2 TYPE
Screwdriver


Please not hand tools **NOT** supplied.

IMPORTANT

These instructions assume that installation is done against solid/tiled walls.

The wall plugs supplied with the installation kit are for use on solid walls.Hollow or stud-partition walls will require alternative fixings.Please consult with a reputable trades person or hardware supplier for the correct type of fixing.


It may also be necessary to consult your tiling supplier about the correct method drilling your tiles.

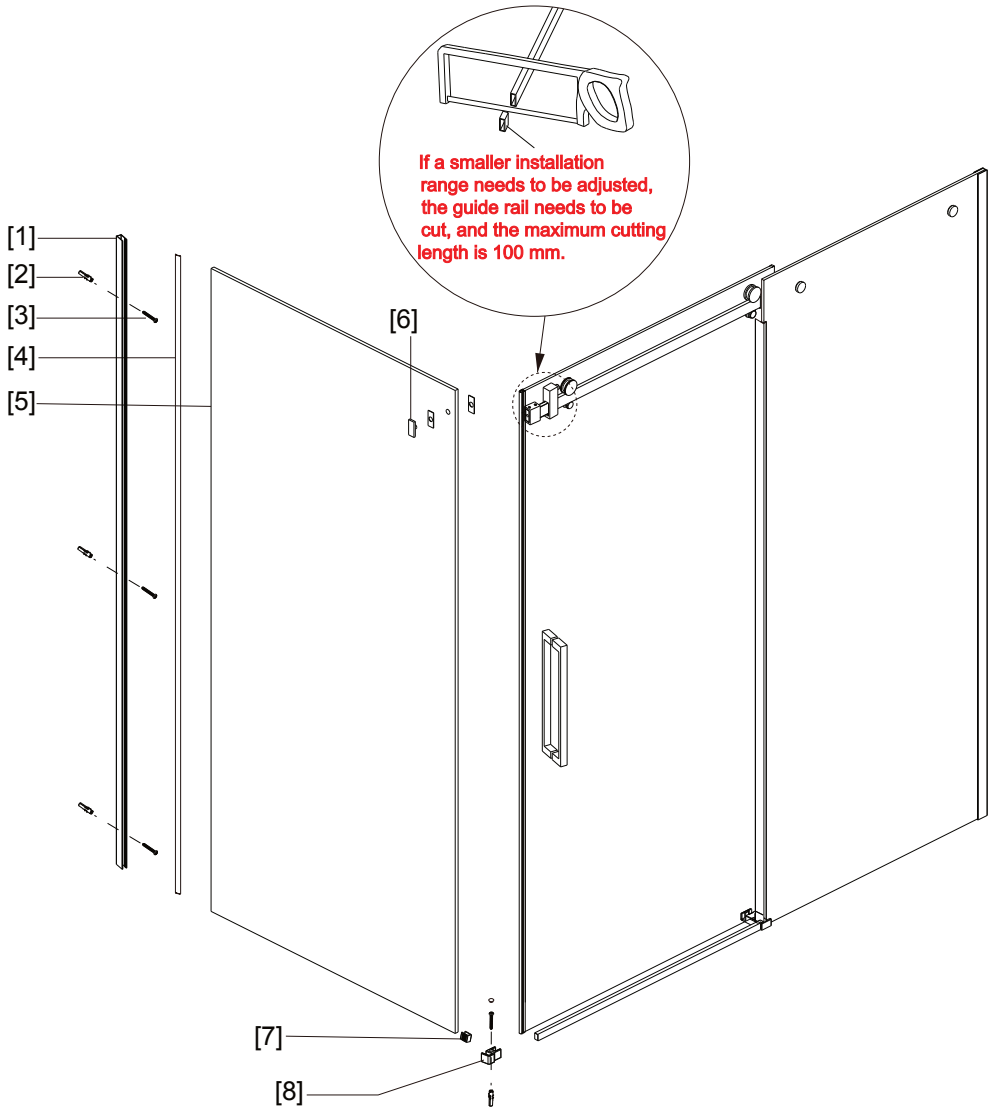


NO.	Description	Qty
1	Wall Profile	1
2	Wall Anchor	4
3	Round Screw M4x30	4
4	T Shaped Seal	1
5	Side Panel Glass	1
6	Side Panel Rail Bracket	1
7	U-shaped sealing strip	1
8	Corner Part	1


Installation Steps

Step 1

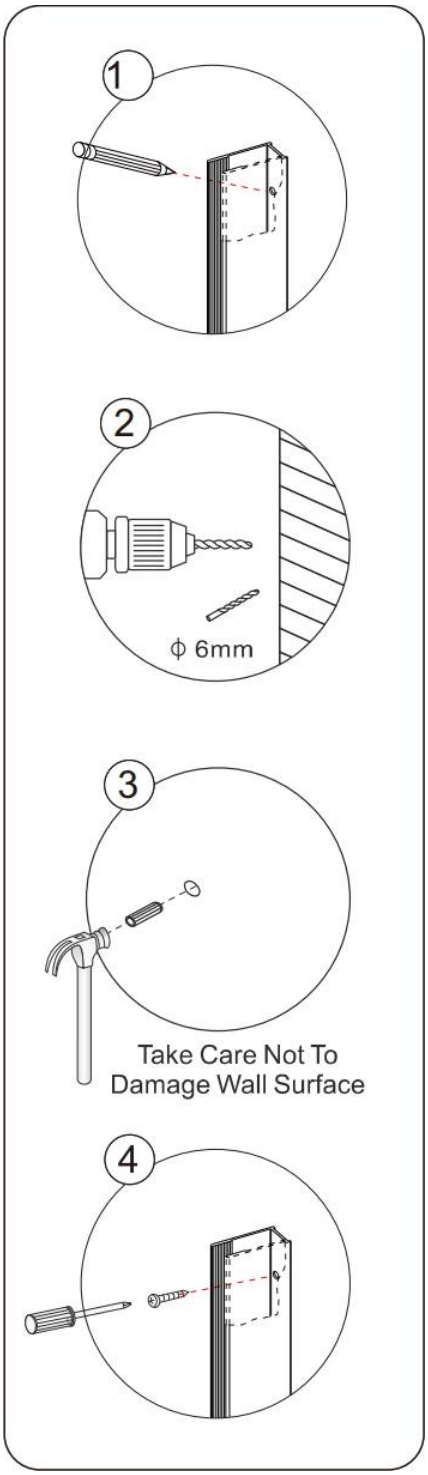


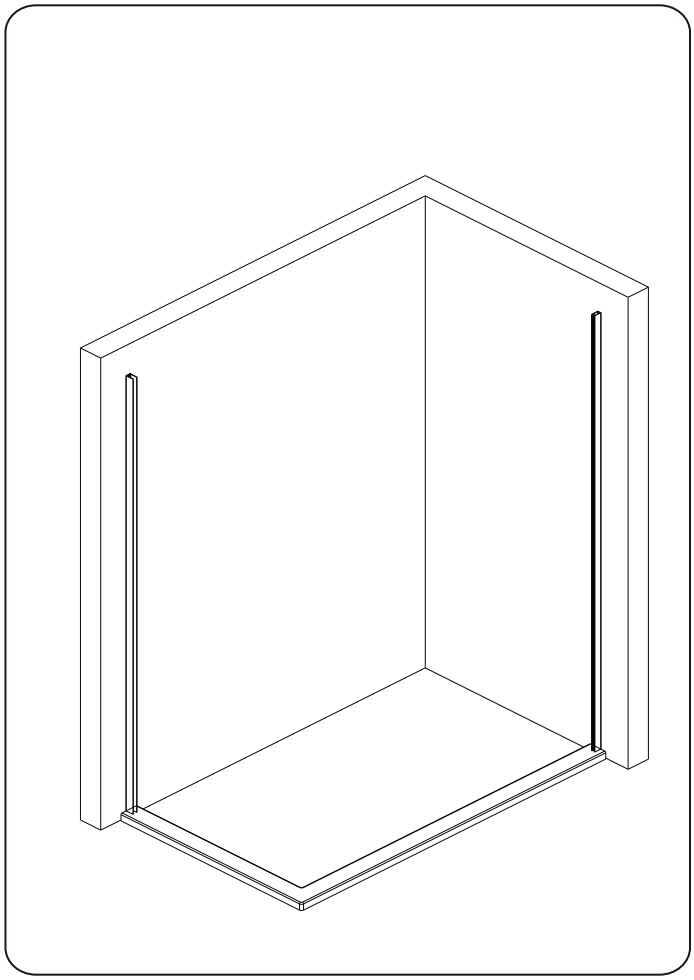



Step 2

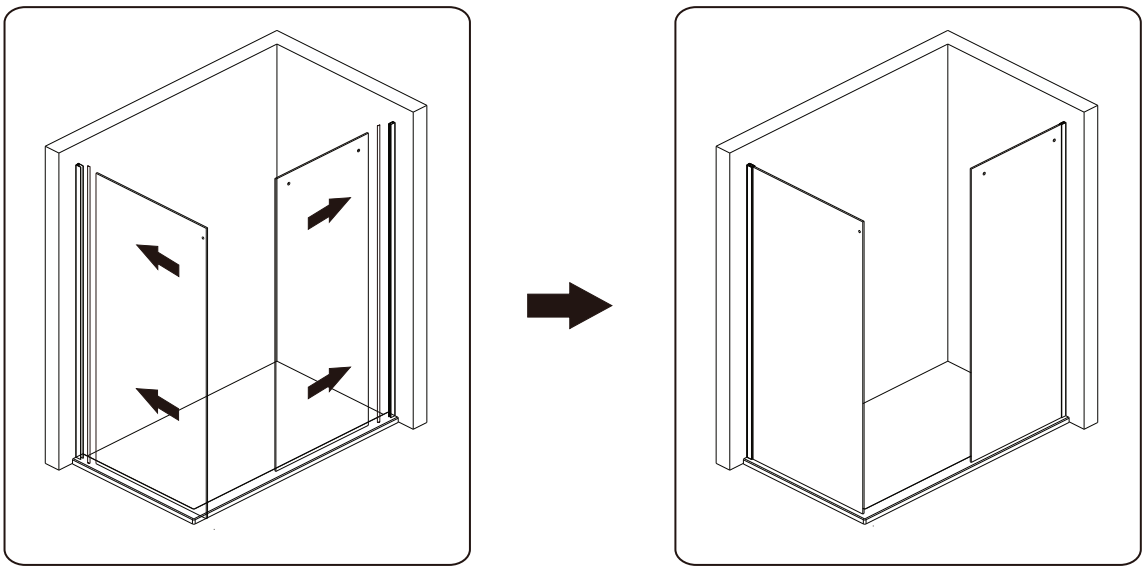


Step 3

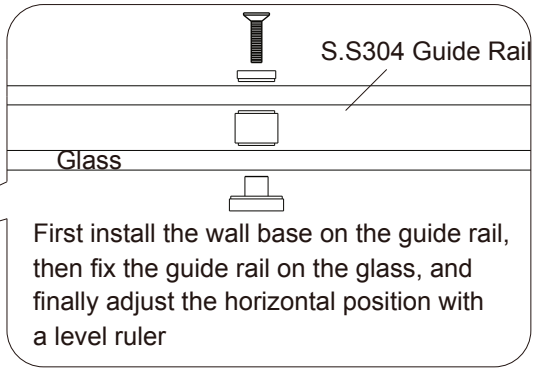
S.S304 Guide Rail
Glass
First install the wall base on the guide rail, then fix the guide rail on the glass, and finally adjust the horizontal position with a level ruler

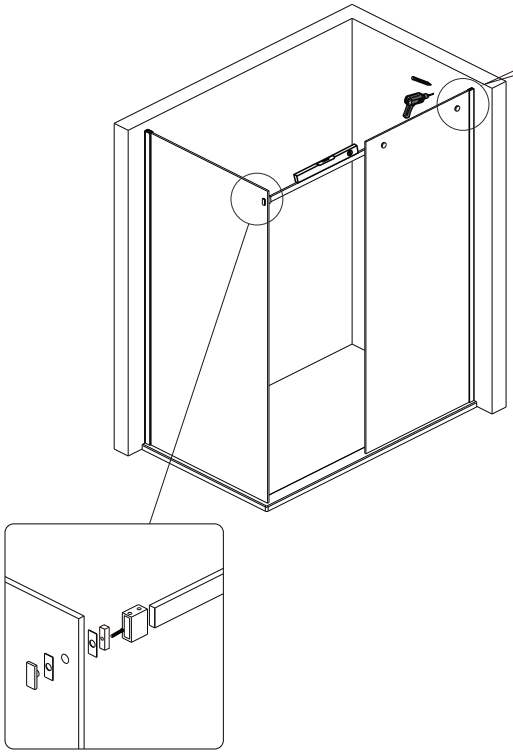


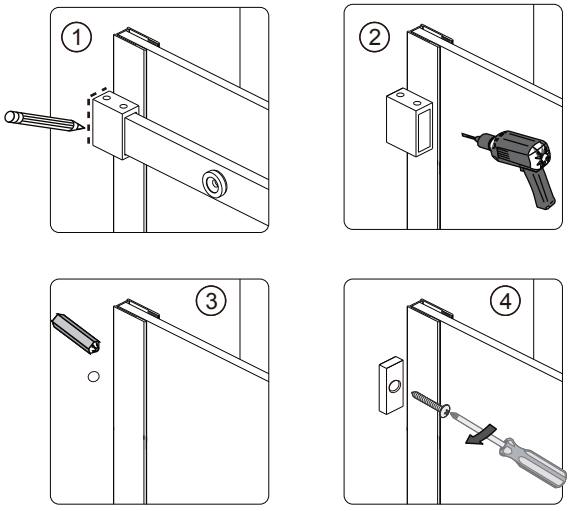
1
2
3
4


Step 4

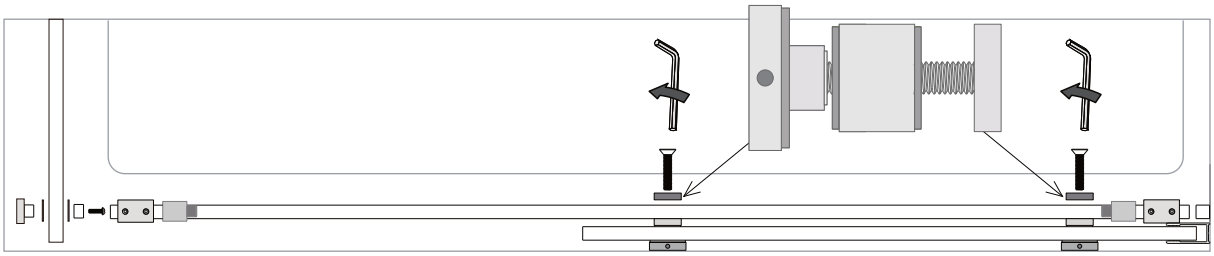

Install the anti-collision block onto the guide rail first,
and then lock the guide rail and wall base tightly

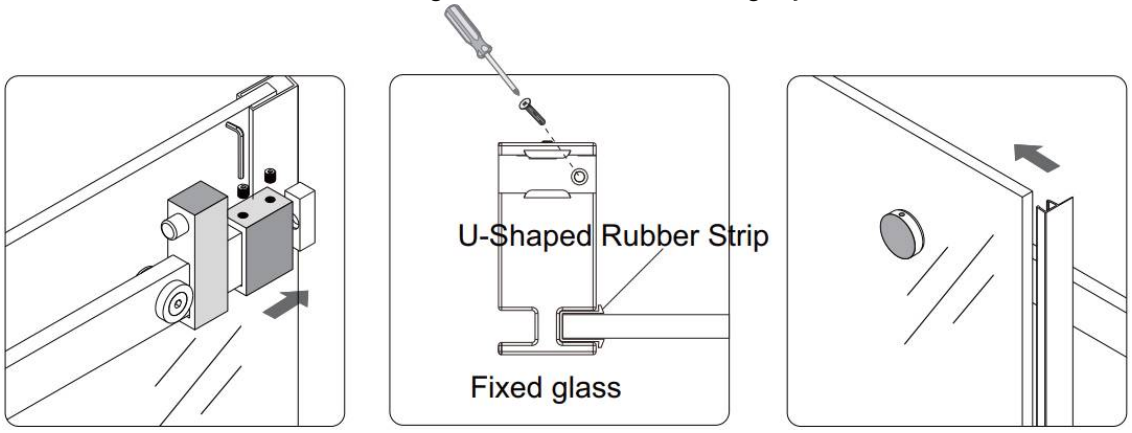


Step 5

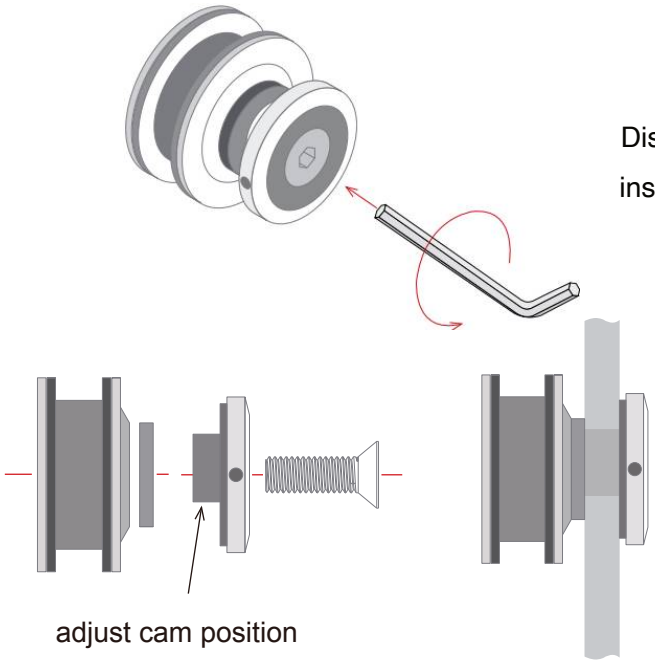


Disassemble the pulley and
install it on the glass


adjust cam position

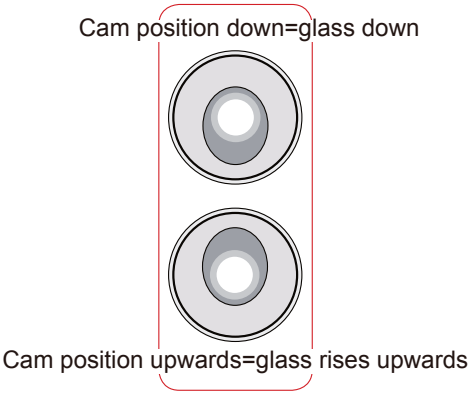


Step 6

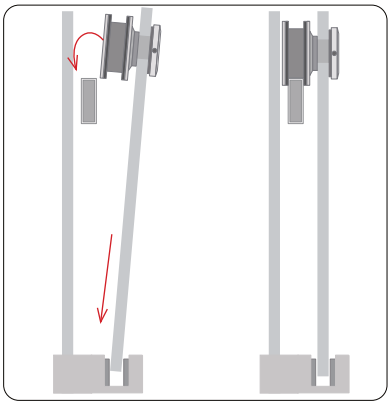


Hang the door glass on the guide rail.

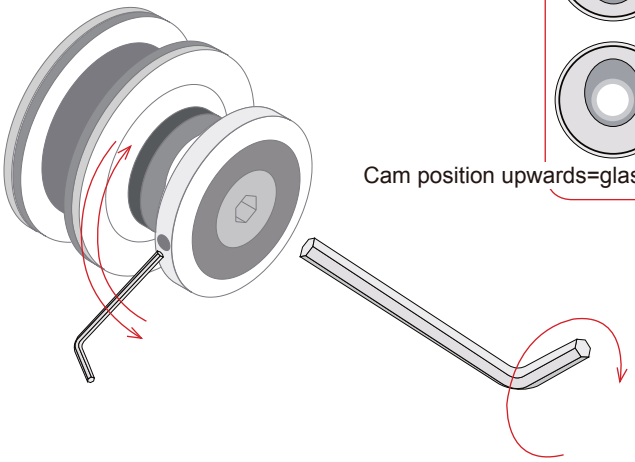


Hang the door glass onto the guide rail

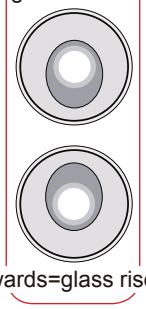


Cam position upwards=glass rises upwards

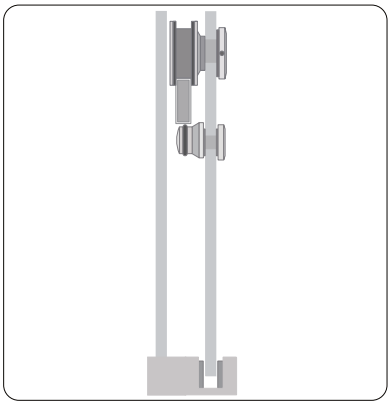


Install anti jump components

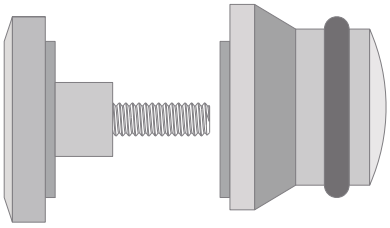

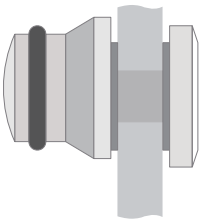



Cam lobe down =piece up




Cam lobe up =piece down


Step 7

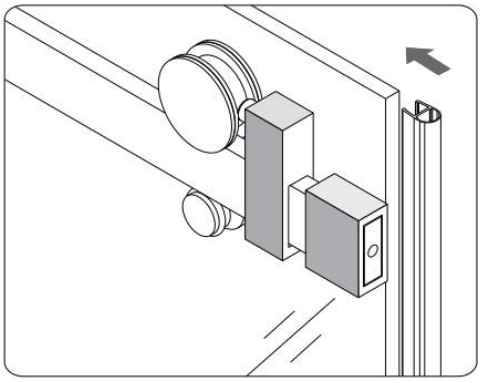

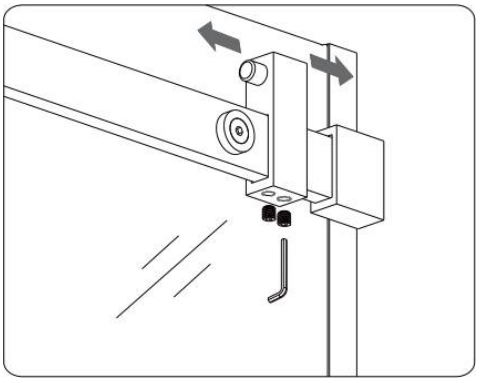



Step 8

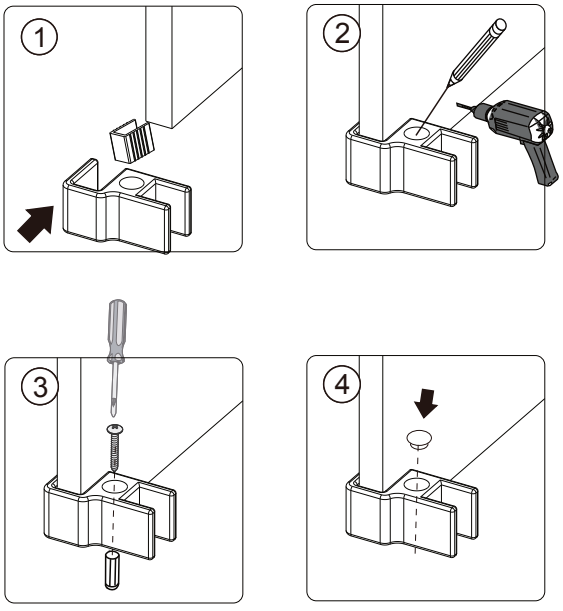

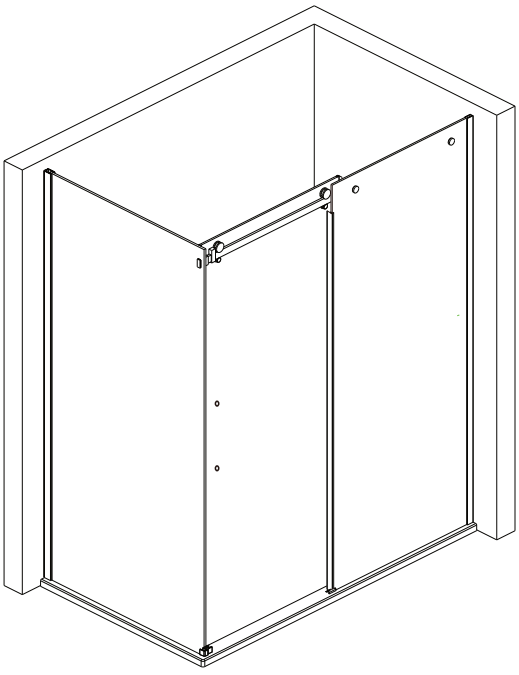


Step 9

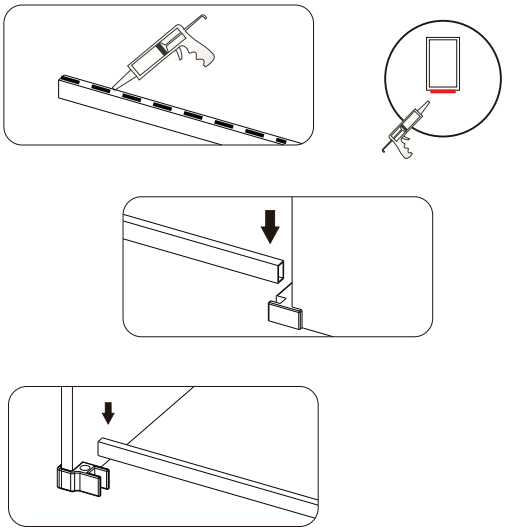


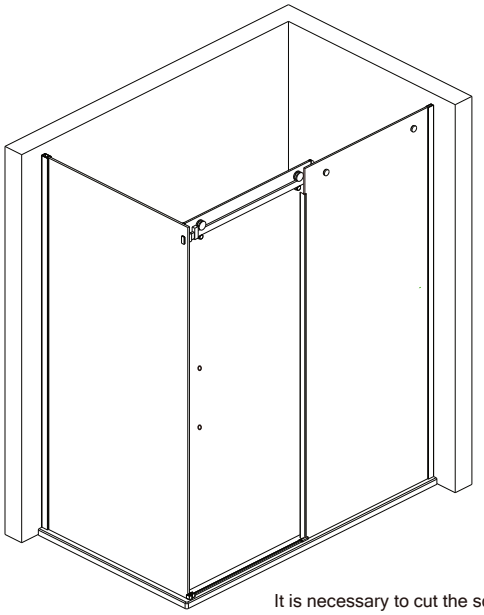


It is necessary to cut the square tube to an appropriate length.

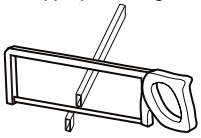

Step 10

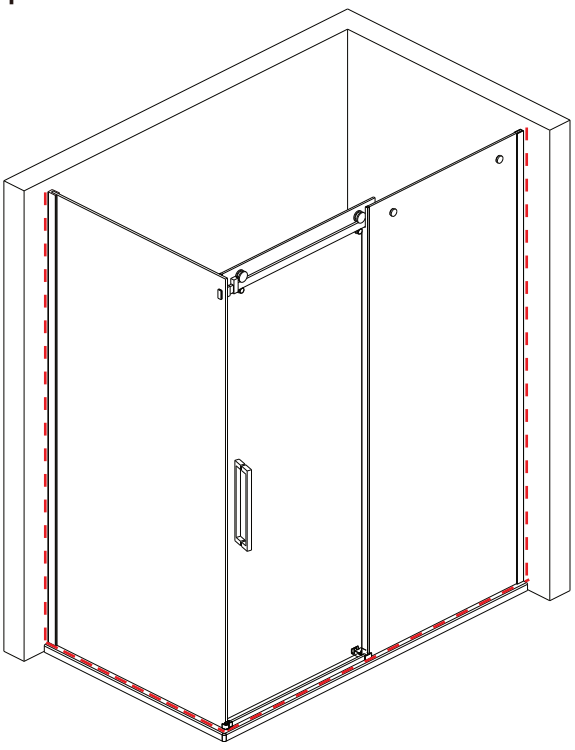

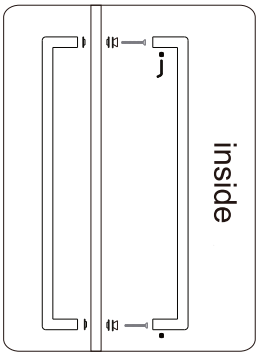



Allow 24 hours for silicone to dry before use.

Silicone on the outside edge only